

NOTE

For correct fit, measure interior dimensions directly above mini fridge.

TOOLS REQUIRED

Hands, Wrench (Optional), Logic (Mandatory)

AVAILABLE SIZING


Large	3" Stem	Extension Range 5 ³ / ₈ –6 ⁵ / ₈ "
Medium	2" Stem	Extension Range 4 ³ / ₈ –5 ⁵ / ₈ "
Small	1" Stem	Extension Range 3 ¹ / ₂ –4 ¹ / ₈ "
Mini*	5/8" Stem	Extension Range 1 ¹ / ₂ –2"

Custom sizing is available. Please contact us.

*For installation of Fridgestop Mini, omit step 2


1

Locate centre point of mini-fridge and cabinet.

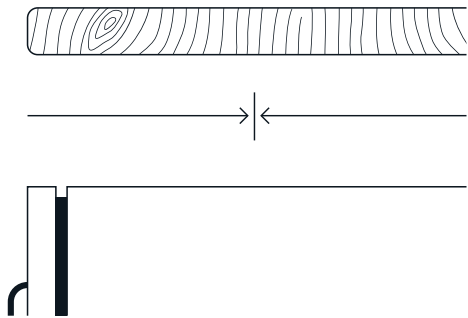


2

Once in position, turn the UPPER fridgestop (I) counter-clockwise to its full extension. Then, turn the UPPER Locking Nut (II) clockwise until it reaches the middle cylinder (III).

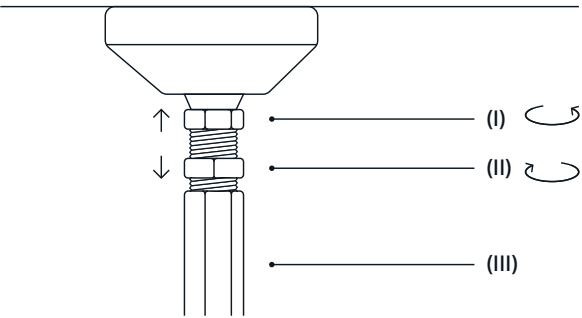

3

Turn the middle cylinder (counter clockwise) by hand or with a wrench to fully tighten.

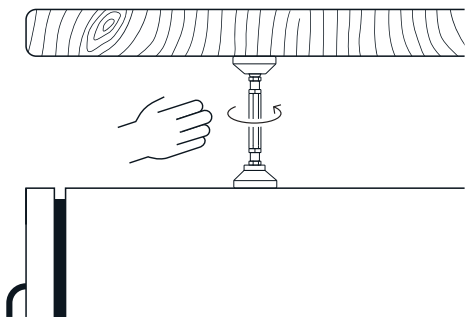

4

Test to make sure the mini-fridge is locked in place. If movement continues, tighten Fridgestop further.

